

FUNCTION AND INQUIRY COMMAND SUMMARY (Not exhaustive)				
Function Command	Operation	Default Setting	Inquiry Mode	Range
A	Autospace - toggle Autospace On/Off	Off	A	-
D	Decrement - subtract 1 from serial #	-	-	-
E d	Edit - begin editing existing message d	-	-	-
F dd	Function Speed - use dd WPM for entry	ØØ	F	05-30
H	Hand Key - Keyer output follows paddle	-	-	-
M	Monitor - toggles monitor speaker On/Off	On	-	-
N dddd	Number - set serial number to dddd	ØØ1	N	9999
R dd ee	Range - limit speed from dd to ee WPM	05-40	R	05-60
S dd	Speed - set to specific dd WPM speed	-	S	-
T dd	Tone - set monitor frequency to ddØ Hz.	70	T	50-99
W dd	Weight - set weighting to dd percent	50	W	25-75
X	Xmit - continuous key-down for tuning	Off	-	-
Z d	Zeros & nines - use serial # option d	Ø	Z	Ø-9
dØ = Ø Ø 9 d1 = - Ø 9 d8 = T T N d9 = - T N				

MULTIPLE-BUTTON FUNCTIONS					
1-2	Function	("F")	4-5	Tune	("X")
3-4	Decrement serial #	("D")	2-5	Reverse paddles	("R")
5-6	Inquiry	("?")	1-6	Reset Speed Range	("OK")
2-3	Hand-key	("H")	1-3-4-6	Reset (complete)	("OK")

MESSAGE-EMBEDDED FUNCTIONS (Not exhaustive)	
/B	Break - suspend msg, wait for paddle input, then continue
/D	Decrement serial number
/Gd	Gap - add inter-character/word spacing to 3+d, where GØ = normal character space and G4 = normal word space (range 0-9)
/N	Number - serial # played and incremented
/Pdd	Pause - speed-independent pause of d.d seconds
/R	Resume - stop msg, allow hand-sent entry, press msg button to resume sending
/Sudd	Speed UP - increase speed by dd WPM
/SDdd	Speed DOWN - decrease speed by dd WPM
/1-6	Send message 1 thru 6

FUNCTION AND INQUIRY COMMAND SUMMARY (Not exhaustive)				
Function Command	Operation	Default Setting	Inquiry Mode	Range
A	Autospace - toggle Autospace On/Off	Off	A	-
D	Decrement - subtract 1 from serial #	-	-	-
E d	Edit - begin editing existing message d	-	-	-
F dd	Function Speed - use dd WPM for entry	ØØ	F	05-30
H	Hand Key - Keyer output follows paddle	-	-	-
M	Monitor - toggles monitor speaker On/Off	On	-	-
N dddd	Number - set serial number to dddd	ØØ1	N	9999
R dd ee	Range - limit speed from dd to ee WPM	05-40	R	05-60
S dd	Speed - set to specific dd WPM speed	-	S	-
T dd	Tone - set monitor frequency to ddØ Hz.	70	T	50-99
W dd	Weight - set weighting to dd percent	50	W	25-75
X	Xmit - continuous key-down for tuning	Off	-	-
Z d	Zeros & nines - use serial # option d	Ø	Z	Ø-9
dØ = Ø Ø 9 d1 = - Ø 9 d8 = T T N d9 = - T N				

MULTIPLE-BUTTON FUNCTIONS					
1-2	Function	("F")	4-5	Tune	("X")
3-4	Decrement serial #	("D")	2-5	Reverse paddles	("R")
5-6	Inquiry	("?")	1-6	Reset Speed Range	("OK")
2-3	Hand-key	("H")	1-3-4-6	Reset (complete)	("OK")

MESSAGE-EMBEDDED FUNCTIONS (Not exhaustive)	
/B	Break - suspend msg, wait for paddle input, then continue
/D	Decrement serial number
/Gd	Gap - add inter-character/word spacing to 3+d, where GØ = normal character space and G4 = normal word space (range 0-9)
/N	Number - serial # played and incremented
/Pdd	Pause - speed-independent pause of d.d seconds
/R	Resume - stop msg, allow hand-sent entry, press msg button to resume sending
/Sudd	Speed UP - increase speed by dd WPM
/SDdd	Speed DOWN - decrease speed by dd WPM
/1-6	Send message 1 thru 6